SCOSCHE

NN1660B

IN-DASH STEREO INSTALLATION KIT FOR 2005-2006 NISSAN ALTIMA

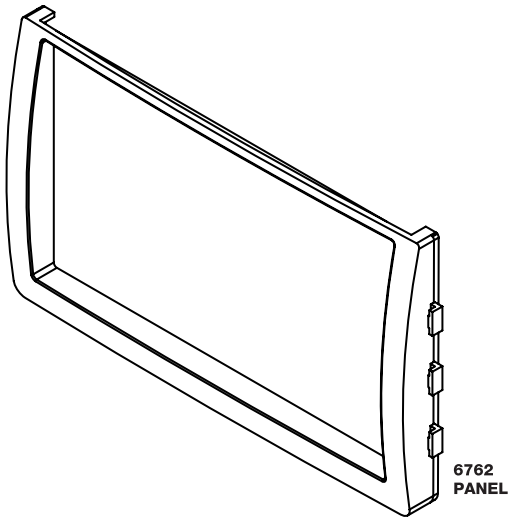

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2005-2006 Nissan Altima vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

NN03B
1995-Up Nissan

NDAB
Nissan Diversity Antenna Adapter

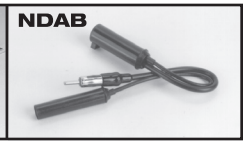

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (NN1660B) in 2005-2006 Nissan Altima vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2009 SCOSCHE INDUSTRIES, INC.

FACTORY STEREO REMOVAL

2005-06 NISSAN ALTIMA

1. With panel removal tool, unsnap trim panel around climate controls.
2. Remove (4) Philips screws securing climate controls, disconnect and remove.
3. With panel removal tool, unsnap panel around Radio and A/C vents.
4. Remove (4) Philips screws securing factory radio, disconnect and remove.

MOUNTING THE STEREO

DOUBLE DIN INSTALLATION

1. Snap the 6762 panel into radio trim panel.
2. Secure factory brackets to aftermarket stereo using screws supplied with stereo or reusing screws from factory stereo, if possible.
3. Reconnect aftermarket stereo and mount back in to dash, finish reassembly

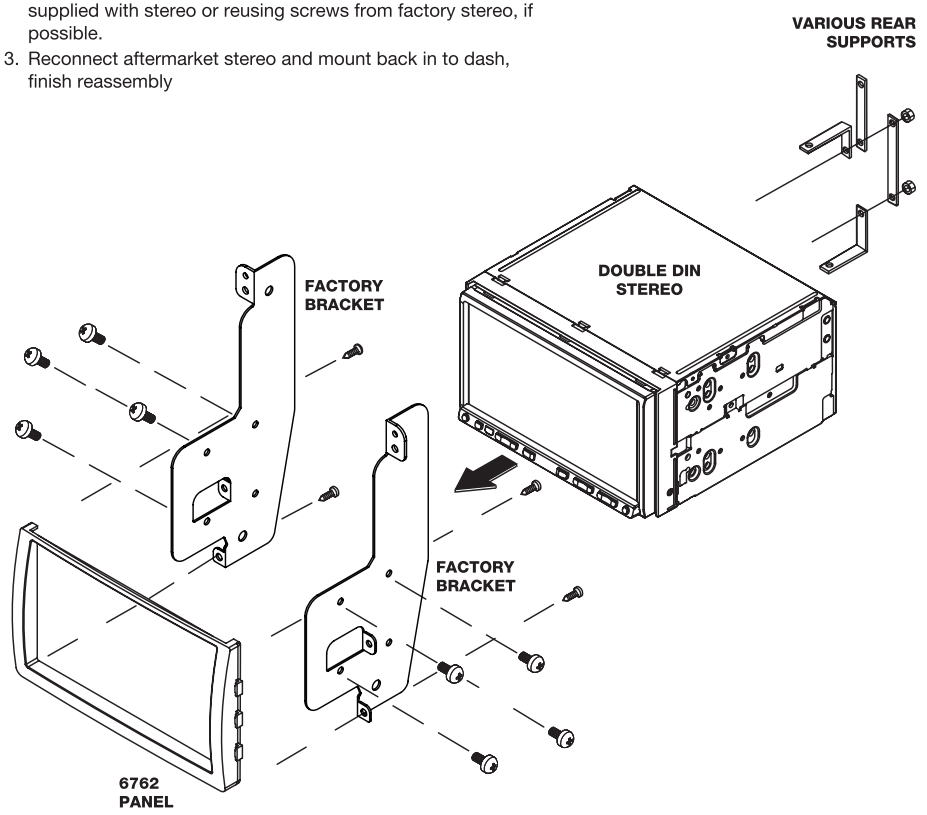

NOTE:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE STEREO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.